

## XF Series- Bench Top Fume Absorbers

### Features:

- ◆ ESD safe and with powerful fan provides high efficiency smoke absorption at low noise.
- ◆ Filtration is accomplished with an activated carbon impregnated urethane foam filter which can be easily replaced.
- ◆ Highly recommended for a factory without exhaust equipment and the laboratories where desoldering is performed.
- ◆ High quality , high capability, but inexpensive.
- ◆ Aerodynamic hood design effectively draws irritating soldering fumes away from the work area.
- ◆ Carbon-impregnated filters trap a limited portion of the flux fumes.
- ◆ Compact size, low profile and adjustable stand allow for convenient placement 6" to 8" (152 mm to 203 mm) from work area.
- ◆ Articulating arm allows optimized positioning and saves bench space.
- ◆ Bench mounting clamp and 3 filters come complete with Articulating Arm Unit.

### XF-1 System Includes:

- ◆ Fume absorber
- ◆ 3 filters

### XF-2 System Includes:

- ◆ Fume absorber
- ◆ Articulating arm
- ◆ Mounting bracket
- ◆ 3 filters

### Assembly Instructions:

1. Fix the support.
2. Slide the activated carbon filter in position.
3. Plug power cord into proper power outlet (110-120 or 220-240V AC).
4. Turn the switch on. (Right side bottom).
5. Set the absorber to face the fume source for best operation.

### Replacement parts:


- ◆ **XF-1F** - Replacement Filter Set, ( 3 pieces per set). Size: 4.8"x4.8" (123x123mm)

### Recommended Additional Equipments:


- ◆ **XF-ARM** - Arm with mounting hardware.

### Hot to Order:

<b>XF-1-115</b>	ESD-Safe Bench-Top Fume Absorber, 115V AC
<b>XF-1-220</b>	ESD-Safe Bench-Top Fume Absorber, 230V AC
<b>XF-2-115</b>	ESD-Safe Bench-Top Fume Absorber, 115V AC with Articulating Arm
<b>XF-2-220</b>	ESD-Safe Bench-Top Fume Absorber, 230V AC with Articulating Arm
<b>XF-ARM</b>	Arm with mounting hardware
<b>XF-1F</b>	Replacement Filter Set, (3 pieces per set). Size: 4.8"x4.8" (123x123mm)

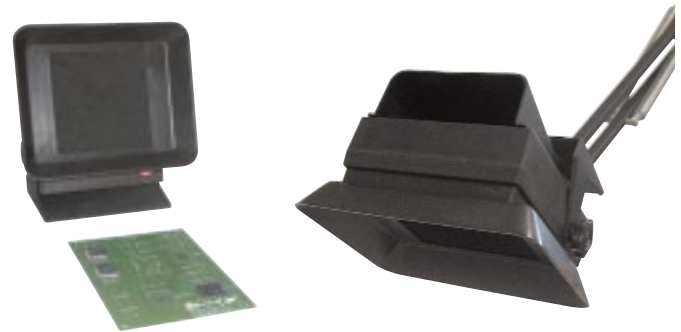

**XF-1**  
ESD-Safe Bench Top  
Fume Absorber

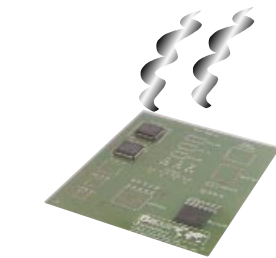

**XF-2**  
ESD Safe Bench Top Fume  
Absorber with Articulating Arm

### Specifications

	XF-1	XF-2
<b>Input Voltage</b>	110-120V AC / 220-240V AC	
<b>Max Air Volume</b>	105 to 126 CFM	
<b>Activated Carbon Weight</b>	12 g	
<b>Unit Weight</b>	2.4 lbs (1,1 kg)	4 lbs (1.8 kg)
<b>Fume absorber Dimensions</b>	7.9"x8.2"x5.1" 200mm×208mm×130mm	
<b>Arm Length</b>	NA	24" (607 mm)